

## SELECT SURFACES DROP & CLICK LUXURY CLICK VINYL TILES

This document provides the installation instructions for **Select Surfaces Drop & Click** Luxury Click Vinyl Tile (Click LVT). Click LVT is produced under the license of Flooring Industries™, the Unilin IP company.

**Important note: The owner/purchaser must inspect for color, finish and the quality before installation. The manufacturer cannot be held responsible for costs incurred when a floor with visible defects has been installed.**

### GENERAL GUIDELINES

All instructions and recommendations are based on the most recent information available. They should be followed for an ideal installation.

1. Click LVT should be installed in indoor climate-controlled locations between 18° - 27°C (65° - 80°F). **Click LVT should NEVER be installed in an outdoor/ exterior setting or in any type of garage.**
2. Click LVT should be acclimated in the climate-controlled locations for 48 hours before starting installation.
3. Click LVT should only be installed after the jobsite has been cleaned and cleared of debris that could potentially damage a finished installation.
4. During the Click LVT installation, mix and install panels from several different cartons to minimize shade variation.
5. The finished Click LVT installation should be protected from exposure to continuous sunlight.
6. Click LVT cannot be installed with adhesives. The use of any sort of adhesive during the installation will void warranty.

### SUBFLOOR INFORMATION

Although Click LVT is designed to be a “floating” floor installation, proper preparation of the subfloor is still a major part of a successful installation. Roughness or unevenness of the subfloor may show through the new floor, resulting in an unsightly surface and cause excessive wear on high spots or indentation on low spots. All subfloor and underlayment patching must be done with a non-shrinking, water-resistant Portland cement patching compound.

#### A. Concrete Subfloors

1. Concrete subfloors must be dry, smooth and free from dust, solvent, grease, oil, asphalt sealing compounds and other extraneous materials. The surface must be hard and dense, and free from powder or flaking.
2. New concrete slabs must be thoroughly dry (at least six weeks) and completely cured. The final responsibility for determining if the concrete is dry enough for installation of the flooring lies with the floor covering installer.
3. Holes, grooves, expansion joints and other depressions must be filled with a latex underlayment, and troweled smooth and feathered even with the surrounding surface.
4. Concrete floors with a radiant heating system are satisfactory, provided the temperature of the floor does not exceed 90°F at any point. Before installation, turn on the heating system to eliminate any residual moisture.

#### B. Wood Subfloors

1. Wood subfloors must be suspended at least 455 mm (18") above the ground. Adequate cross-ventilation must be provided, and the ground surface of a crawl space must be covered with a suitable vapor barrier.
2. Wood subfloors directly on concrete or installed over sleeper construction are NOT suitable for the installation.
3. All wood and wood composition panels, including plywood, OSB, flake board and particle boards, can be used providing they are smooth, flat, structurally sound and free of deflection.
4. A 6 mm (1/4") underlayment panel should be installed over the subfloor if the surface of the wood subfloor is not smooth.

#### C. Existing Floor Coverings






1. Click LVT can be installed over most existing hard-surface floor coverings provided the existing floor surface is smooth, or can be made smooth.
2. Ceramic tile should be made smooth by applying a cementitious overlay such as patching or leveling compound manufactured specifically to smooth out ceramic grout joints.
3. For existing resilient floor, it may be required to apply a skim coat of embossing leveler over a deeply embossed floor. Heavily cushioned vinyl floor or vinyl floor consist of multiple layers are NOT suitable subfloor for installation.

### INSTALLATION

#### A. Tile Layout

Do not secure individual tiles of Click LVT to the subfloor as it is designed to be a floating floor. All doorjamb should be undercut and cabinets cannot be installed on top of Click LVT. Wall moldings and transition strips should be installed over any exposed tile edges but should not be fastened through the tiles.

1. First, determine how you want the flooring to run. Typically for rectangular tile products, the flooring runs the length of the room. There may be exceptions since it is all a matter of preference.
2. To avoid narrow tile widths or short tile lengths near the walls/doors, it is important to do some pre-planning. Using the width of the room, calculate how many full boards will fit into the area and how much space remains that will need to be covered by partial tiles. Divide the remaining space by two to calculate the width of the partial tiles. Do the same along the length.
3. Note that if the first row of tiles does not need to be trimmed in width, it will be necessary to cut off the unsupported tongue so that a clean, solid edge is toward the wall.
4. 8mm (5/16") expansion gaps should be kept from the wall during the installation. This will allow space for the natural expansion and contraction of the tiles.
5. The tiles should be installed from left to right. From the top left corner of the room, put the first tile in place so that both the head and side seam grooves are exposed.
6. **Figure 1 and 2:** Install the second tile in the first row by angling the short side tongue into the short side groove of the first tile. Continue installing additional tiles along the first row using the same angling method.
7. To start the second row, cut a tile that is half the length of the first tile in the first row. This will create a popular staggered tile look. Then install this first tile by inserting the long side tongue into the groove of the tile in the first row.
8. **Figure 3:** Install the second tile in the second row by inserting the short side tongue into the previously installed first tile short side groove.
9. **Figure 4:** Align the tile so the long side tongue tip is positioned just over the groove lip of the tile in the first row.
10. **Figure 5:** Using gentle force and at a 20-30 degree angle, push the long side tongue into the groove of the adjoining tile by sliding along the short side seam. You may need to lift the tile to the left of it slightly to allow for the “sliding” action.
11. The remaining tiles can be installed in the room using the same technique. Maintain 8mm (5/16") expansion gaps against all fixed vertical parts (such as walls, doors, cabinets etc).
12. The tiles can be cut easily with a utility knife, just score the top of the tile and snap the tile in two.
13. When installing Click LVT in a bathroom, allow an expansion gap of 8 mm (5/16") around the perimeter of the room and around the perimeter of the toilet. These expansion gaps will allow the flooring to expand and contract without causing peaking in the flooring. Do not install the toilet on top of the newly installed floor. When leaving an expansion gap around the toilet, an area will be left that is exposed to the subfloor. To cover the exposed area, apply a silicone caulk around the toilet area, similar to the caulking around the bathtub area. The silicone caulk is flexible and will allow the flooring to expand and contract while preventing water from reaching the subfloor. Follow the manufacturer’s installation instructions and safety procedures when applying the silicone caulk.

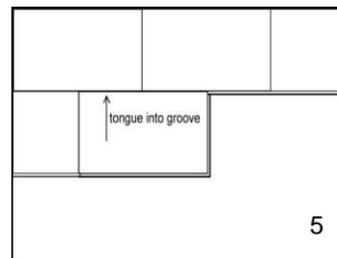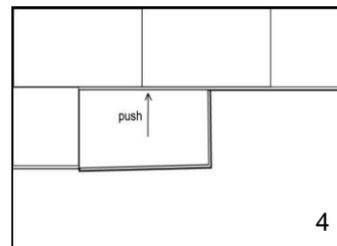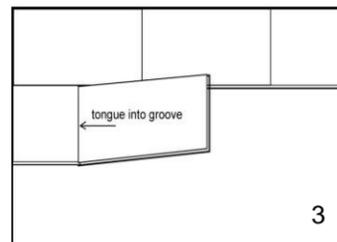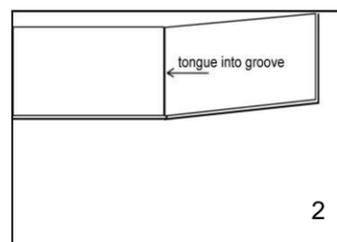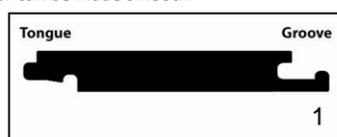

#### B. Repairs

In the unlikely event that a Click LVT tile is damaged for whatever reason, the simplest method is to disconnect the tiles carefully (protecting the tongue and groove edges) until the damaged tile can be removed. Then replace the damaged tile with a new one and reassemble the disconnected tiles. This typically works for tiles that are close to the two long perimeters of a room.

For damaged tiles that are not close to the perimeter, you may have to remove the damaged tiles and insert new pieces without the short and long end grooves.

1. Using a sharp utility knife and a straight edge, cut out the center of the damaged tile by leaving approximately 1" strip attached to the adjacent tiles.
2. Carefully cut back from the four corners of the tile to the inside edges in space left by the cut out tile.
3. Remove the tile edges carefully from the adjacent tiles making sure the tongues and grooves of the adjacent tiles are not damaged.
4. Using a utility knife, remove the tongue strip on both the long and short ends of the replacement tile. In addition, remove the groove strip of the short end of the replacement tile.
5. Place some doubled sided carpet tape along the three sides of the adjacent tiles where the tongues and the groove of the replacement tile have been removed. Only the top side release paper of the carpet tape should be removed. The bottom side release paper should NOT be taped on top of the subfloor.
6. Position the replacement tile by engaging the groove of the long side into the tongue of the adjoining tile and pushing down on the other three sides. The carpet tape will hold the replacement tile in place with its adjacent tiles. Use a hand roller to further secure the tape.

### WARRANTY

**Select Surfaces Drop & Click** Luxury Click Vinyl Tile is covered by a **limited warranty of 20 years for residential use**. The stipulations of the limited residential warranty are as follows:

- The flooring will be free of manufacturing defects.
- The flooring surface will not wear through under normal household use.

**Select Surfaces Drop & Click** Luxury Click Vinyl Tile is covered by a **limited warranty of 5 years for light commercial use**. The stipulations of the limited light commercial warranty are as follows:

- The flooring will be free of manufacturing defects.

**The following conditions apply to the warranty and may void the warranty if not followed correctly:**

- The flooring must be installed according to the instructions provided.
- If filing a warranty claim, it must be submitted within 30 days of the discovery of the damage.
- Any damage to the wear layer must be evident and visible, measuring at least 13 cm<sup>2</sup> (2 square inches).
- Proof of purchase, such as a bill of sale is mandatory when requesting warranty service.
- The warranty is non-transferable.
- The manufacturer reserves the right to designate a representative to inspect the floor in question and remove samples for analysis.
- The warranty includes the replacement material, and excludes labour costs.

### WARRANTY EXCLUSIONS

- Damage due to improper installation, care, cleaning, or maintenance.
- Use of any adhesive or solvent material during installation.
- **Installation of Click LVT in an outdoor/ exterior setting or in any type of garage.**
- Damage caused by severe impact, scratching, or cutting, fire, water damage, alterations, or any other wear or damage caused by acts of God.
- Flooring dulled by soaps, detergents, harsh chemicals, dressings, one-step cleaners or wax.
- Damage caused by high heels, burns, cigarette burns, cuts, scratches, gouges, and indentations including damage from improper floor protectors and furniture rests; staining caused by dyes tracked from carpet, fertilizers, coal, tar, driveway sealers, oil drippings or other similar materials.
- Problems due to moisture and/or alkalinity of the subfloor.
- Flooring installed over unstable subfloors (particleboard, chip wood, or pressboard) or improperly prepared subfloors, and or wet/cold floor are not covered by the limited warranty.
- Discoloration from mold or from flooding, leaking plumbing or appliances, water entering through sliding glass doors or similar conditions.
- Discoloration by exposure to direct sunlight or heat generation.
- Discoloration caused by the use of area rugs or floor mats.

Scan to view installation video:



If you have any questions, please visit [www.selectsurfaces.ca](http://www.selectsurfaces.ca) or call 1 855-250-8167.