SELECT SURFACES

STAIRNOSE

Stairnoses provide a safe and elegant finish for stair edges and landings



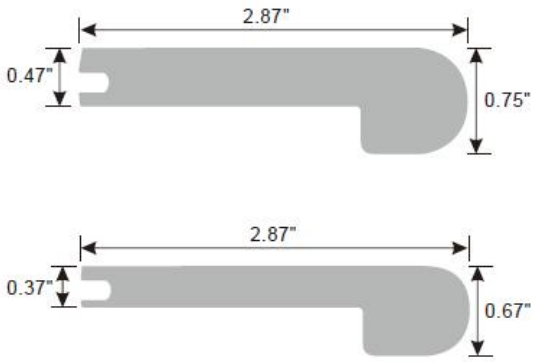

TYPICAL STAIR ASSEMBLY

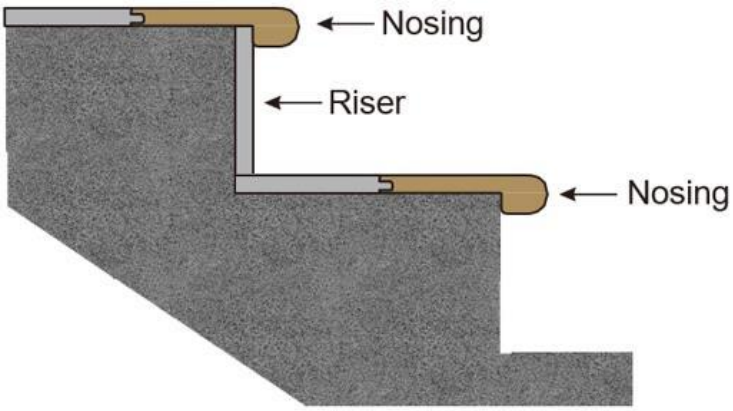

INSTALLATION STEPS

1. Measure and cut the nosing to fit. Dry fit the molding to confirm an adequate fit.
2. Scuff or abrade the underside of the nosing with coarse sandpaper.
3. Clean the underside of the nosing and allow it to dry.
4. Make sure the substrate is clean.
5. Apply premium construction adhesive in an S pattern.
6. Slowly insert the nosing, ensuring a flush fit to the stair edge and a tight butt against the flooring.
7. Apply direct pressure and secure with weights or sandbags, or pre-drill and insert finish nails, subject to local building code requirements.
8. Fill nail holes with a color-matched sealant.